



Replacing a Tape End

1

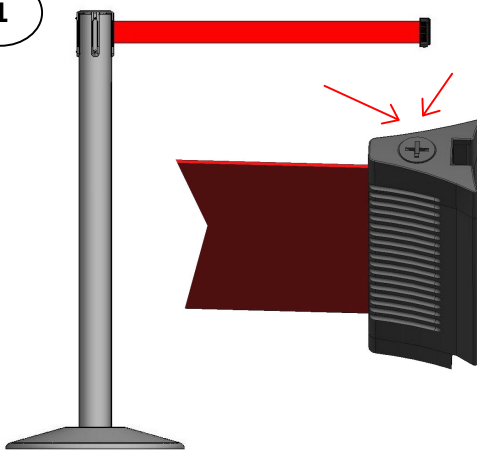


1) Extend the webbing out of the cassette. Note the screw head on the top of the tape end, this will determine the orientation in which the replacement tape end should be fitted.

2

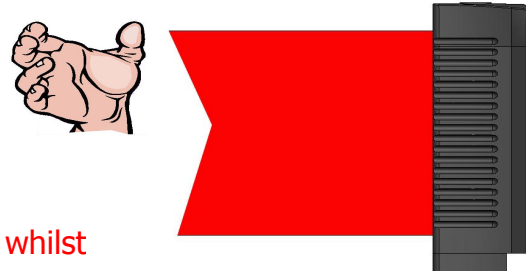


2) Grip and hold the webbing at all times whilst replacing the tape end to prevent it retracting back into the cassette.

3

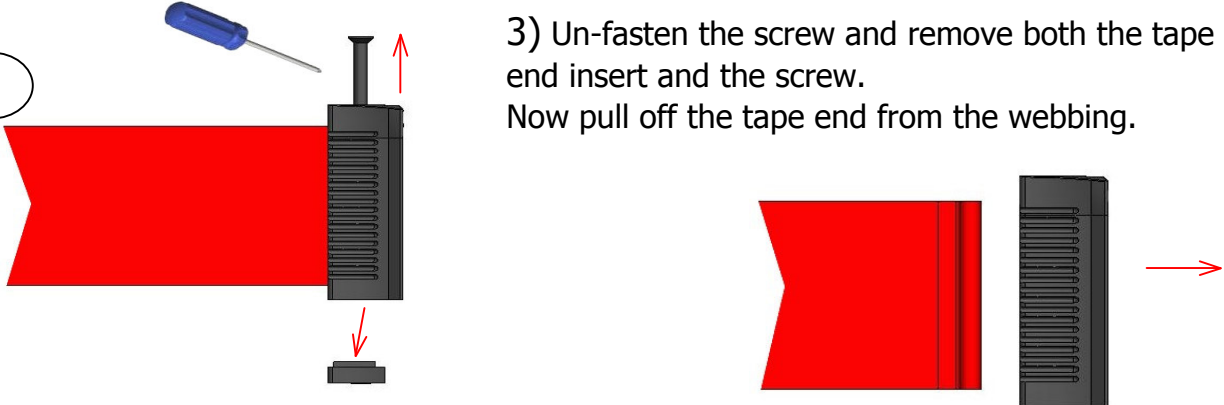


3) Un-fasten the screw and remove both the tape end insert and the screw. Now pull off the tape end from the webbing.

4

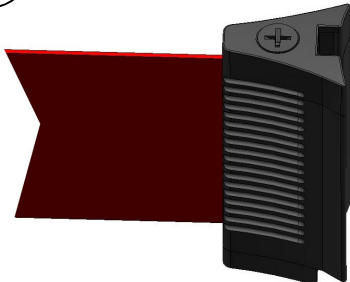

4) Repeat step 3 in reverse to fit the new tape end (Ensuring it is fitted in the correct orientation). Tug on the tape end to ensure the screw has fed through the loop on the end of the webbing prior to releasing it.

5

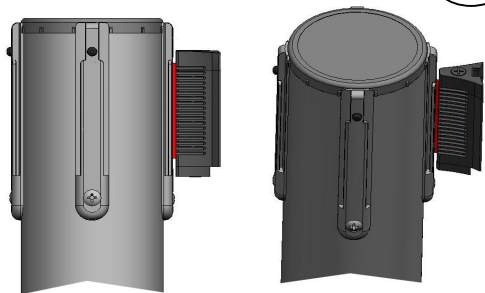

5) Release the webbing and allow it to retract back into the cassette.